

MALAMOO

3 SECOND TENT PITCHING INSTRUCTIONS


MEGA

TO PITCH THE 3 SECOND TENT


Remove the 3 Second Tent from its carry bag and throw it into the air. Be sure to release the tent away from people and any obstacles. The tent will instantly pop open. Simply position the tent where desired and peg down the base and the pre-attached guy ropes.

TO PACK-UP THE 3 SECOND TENT

Make sure the 3 Second Tent has been completely unpegged. Pull the top edges of one side of the frame together so that they meet at one position (1 & 2). Hold the position and then stand the tent vertically as displayed (3). Push the top rounded end down and then back into itself. With your left hand push forward and with the right hand pull backward (4 & 5). Finish the step so the two rounded ends meet together (6).

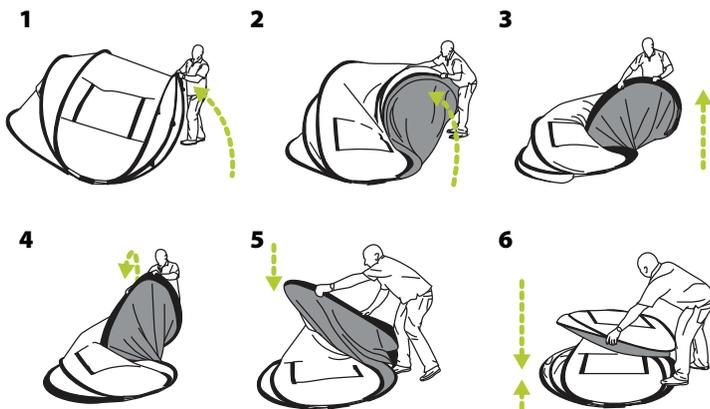


Straighten up the tent (7). Twist the sides, one side push forward and the other pull backwards (8 & 9). Take one side and flip over to meet the other side to form a complete circle (10 & 11). Hold the folded tent together and place it neatly into the carry bag (12).

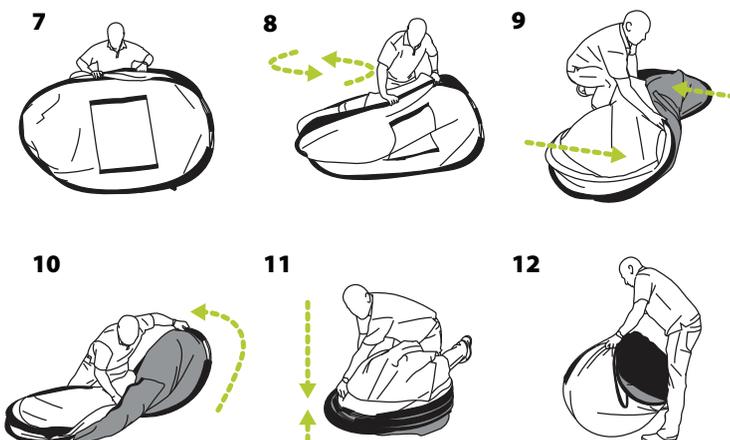


BEFORE USING

We suggest you run a test pitch first to familiarise yourself with your new Malamoo 3 Second Tent. Make sure to review your contents and to pack all parts into the tent carry bag.

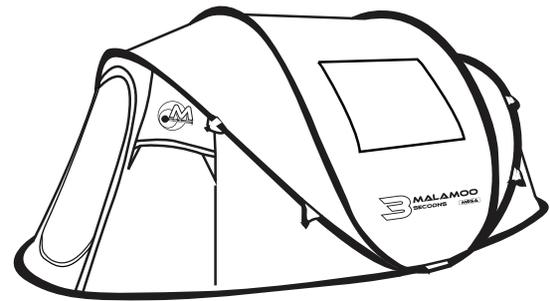

PEGGING THE 3 SECOND TENT

First peg points A, B, C, D to ensure the tent is stable. The 3 Second Tent fly and Awning is already attached to the tent. To stabilise the tent in windy conditions, peg out the guy ropes E, F, G & H. To set up the awning insert the awning poles and peg with the included guy ropes.

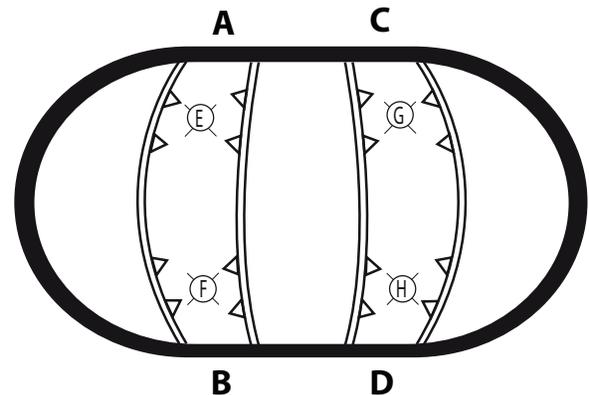

SELECTING A SITE

Before pitching your tent, find an area that is level and can offer moderate wind and weather protection. Make sure the area is clear of overhanging branches and debris such as twigs and stones as they may damage the tent.

WARNING

This tent can burn. Do not pitch the tent near a camp fire or any other flame source. Do not use any candles, matches or any other flame sources in or near the tent. Never use any fuel-burning oxygen-consuming devices or any device that produces any fumes, including stoves, lanterns, hibachis or heaters in your tent. This could result in carbon monoxide poisoning, injury and/or death. Never leave your tent erected in strong winds - collapse tent and seek refuge in appropriate shelter.